VESTEL WHITE GOODS	DOUBLE DOOR – 4561 CHANGING THE DOORWAY DIRECTION	CUSTOMER SUPPORT

1- Unscrew the screw fixing the upper hinge cover (Fig-1) and remove it.

Figure-1

2- Unscrew the three screws fixing the upper hinge and remove it. (Fig-2)

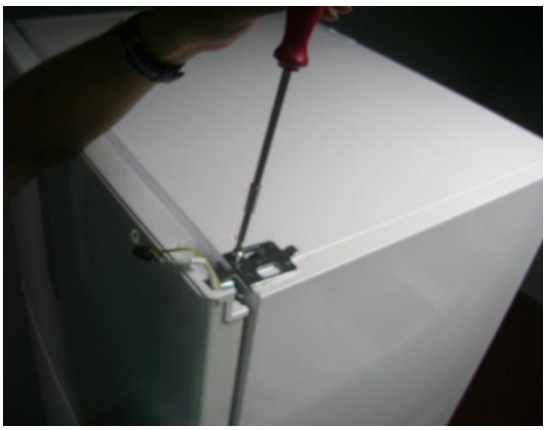

Figure-2

3- Remove the freezer door. (Fig-3)

Figure-3

4- Unscrew the two screws which are fixing the middle hinge. (Fig-4)

Figure-4

5- Remove the refrigerator door. (Fig-5)

Figure-5

DECEMBER 2014

6- Unscrew the bottom hinge fixing screws and remove it. (Fig-6)

Figure-6

7- Unscrew the stationary foot of bottom hinge and screw to Hole-1 Unscrew the hinge pin and screw the pin to Hole 2. (Fig-9)

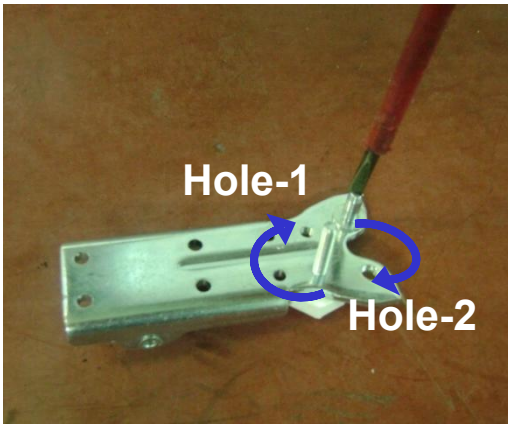

Figure-7

8- Unscrew the stationary foot and front wheel (Fig-8.1) and screw the right side. (Fig-8.2)

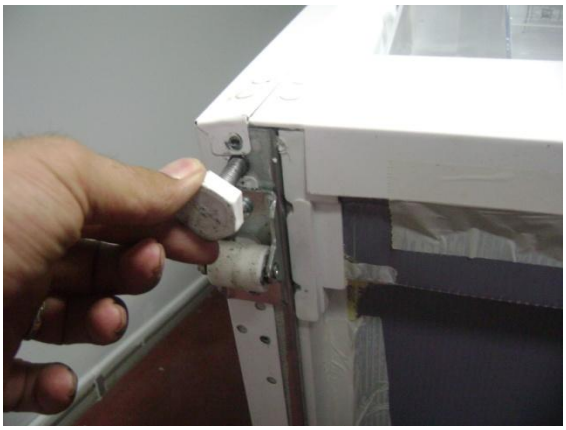

Figure-8.1

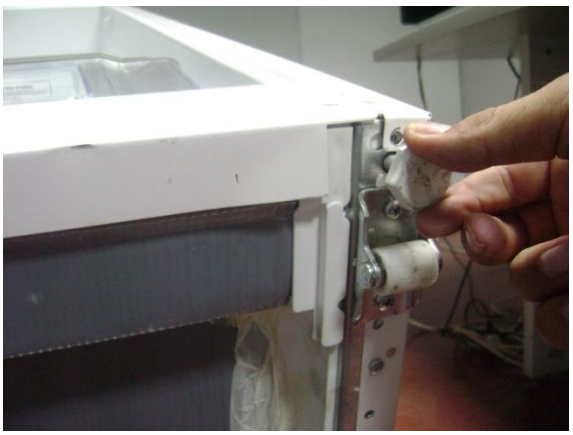

Figure-8.2

9- Screw the bottom hinge to the left side . (Fig-9)

Figure-9

10- Remove the middle hinge cover on the left. (Fig-10)

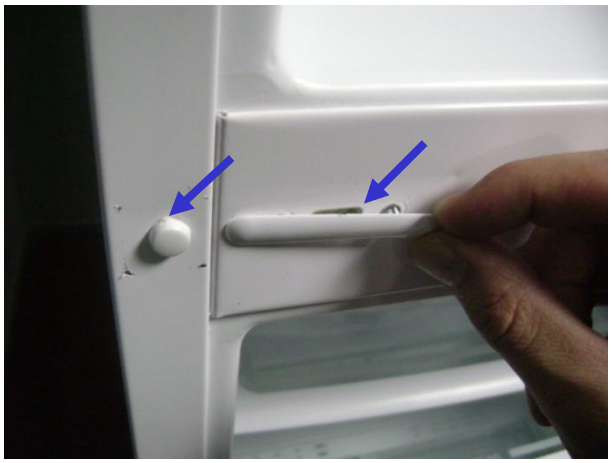

Figure-10

11- Insert the middle hinge cover to the right side. (Fig-11)

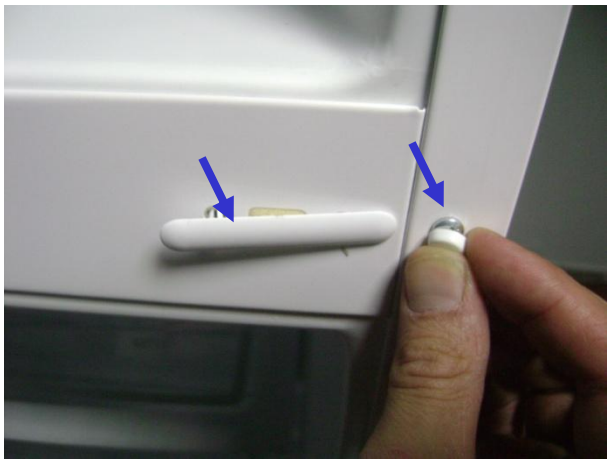

Figure-11

12- Replace the refrigerator door top bushing (Fig-12.1) and top bushing cap. (Fig-12.2)

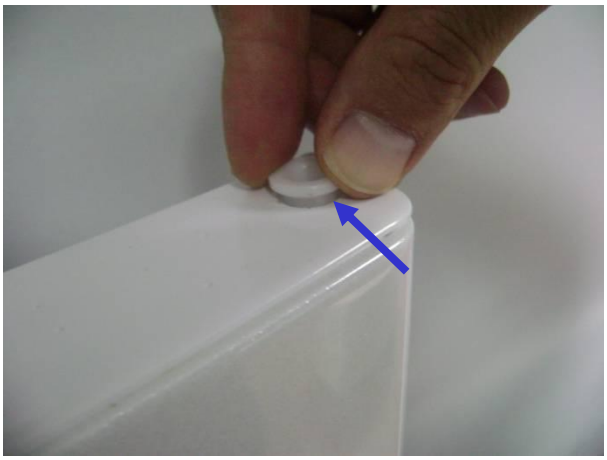

Figure-12.1

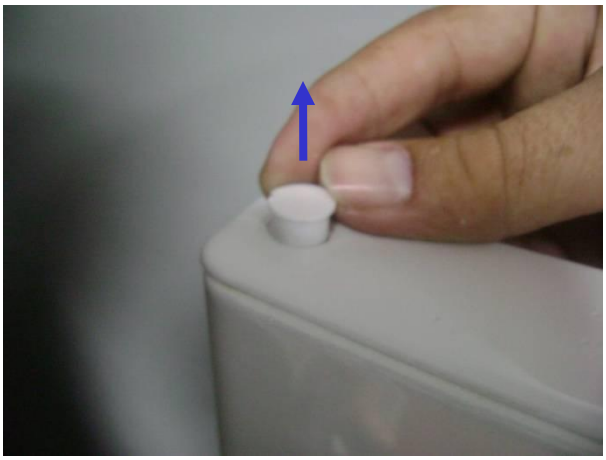

Figure-12.2

13- Remove the refrigerator door bottom bushing and bottom stopper and then insert them the left side. (Fig-13)

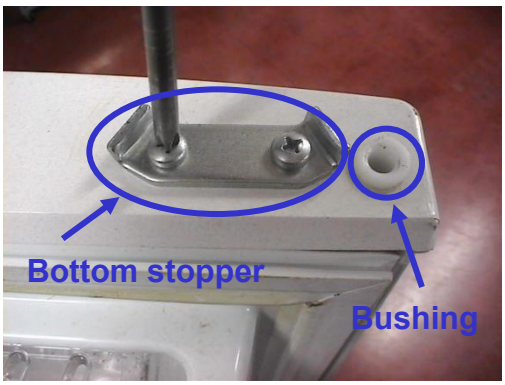

Figure-13

14- Remove the freezer door right catcher (Fig-14.1) and assemble the left catcher to the left. (Fig-14.2)

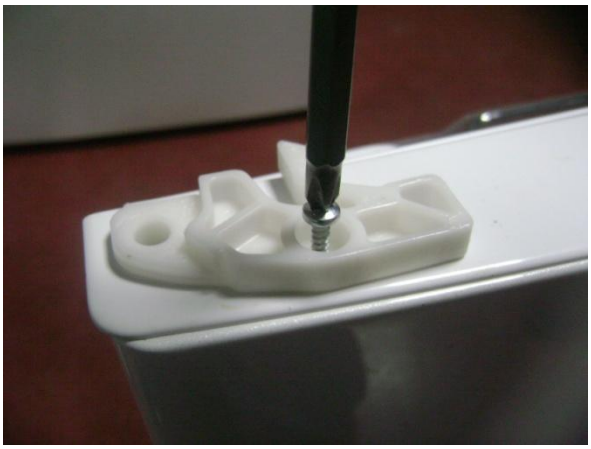

Figure-14.1

Figure-14.2

15- Assemble the refrigerator door. Turn the middle hinge by 180º. Fix the middle hinge by tighting the screws. (Fig-15.1) Assemble the freezer door. (Fig-15.2)

Figure-15.1

Figure-15.2

16- Unscrew the screw fixing the top hinge pin. Then fix left top hinge pin to left side of the top hinge. (Fig-16) (You can find the left top hinge pin in the user manual bag)

Figure-16

17- Screw the left top hinge. (Fig-17.1) and screw the hinge cover. (Fig-17.2)

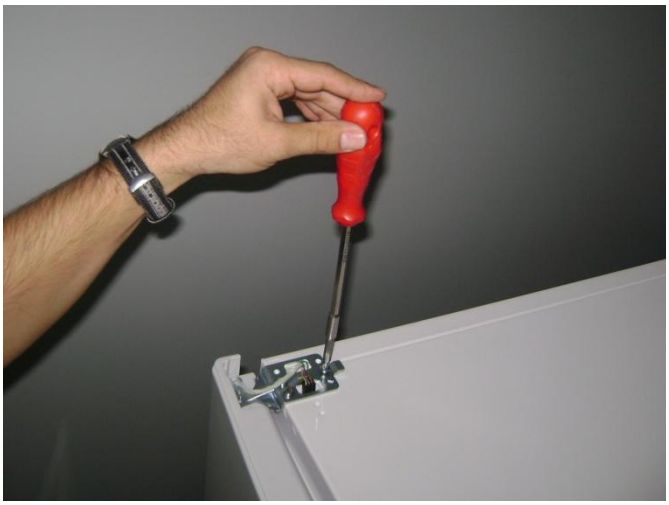

Figure-17.1

Figure-17.2

• Thermostat automatically regulates the inside temperature of the refrigerator compartment and freezer compartment. By rotating the knob from position 1 to 5, colder temperatures can be obtained. «0» position shows thermostat is closed and no cooling will be avaible.
• For short-term storage of food in the freezer compartment, you can set the knob between 1 and 3 position.
• For long-term storage of food in the freezer compartment, you can set knop 3-4 position.

Warnings for Temperature Settings

• The ambient temperature, temperature of the freshly stored food and how often the door is opened, affects the temperature in the refrigerator compartment. If required,change the temperature setting.
• It is not recommended that you operate your fridge in environments colder than 10°C in terms of its efficiency.
• The thermostat setting should be done by taking into consideration how often the fresh food and freezer doors are opened and closed, how much food is stored in the refrigerator, and the environment in which the refrigerator is located.
• Your fridge should be operated up to 24 hours according to the ambient temperature without interruption after being plugged in to be completely cooled. Do not open doors of your fridge frequently and do not place much food inside it in this period.
• A 5 minute delaying function is applied to prevent damage to the compressor of your fridge, when you take the plug off and then plug it on again to operate it or when an energy breakdown occurs. Your fridge will start to operate normally after 5 minutes.
• Your fridge is designed to operate in the ambient temperature intervals stated in the standards, according to the climate class stated in the information label. It is not recommended that your fridge is operated in the environments which are out of the stated temperature intervals in terms of cooling efficiency.

Climate Class	Ambient Temperature (°C)
T	Between 16 and 43 (°C)
ST	Between 16 and 38 (°C)
N	Between 16 and 32 (°C)
SN	Between 10 and 32 (°C)

Super freeze and low ambient switch (If super switch is available)

a) Super freezing: If ambient temperature is more than 16°C,
This switch can be used as super freeze switch. Super freeze switch should be used for freezing the fresh food or when the RED lamp on the head panel is ON. (RED lamp on the head panel becomes ON when there is insufficient cooling). The appliance will work longer when you activate this switch. So after you get the cold condition (or the Red lamp on the head panel is off) you must return to previous position. At the ambient temperature more than 18°C, if super freezing function doesn't want to be used, it must always be set to OFF position.

b) Low ambient performance:

• Normally set this switch to position. Except when the ambient temperature is low like in winter (ie.below 16°C) or when the freezer temperature needs to be maintained lower. In that case, turn the switch to position ON.

• To set super switch ON that is on the thermostat box, press the red switch down to position. The red switch will lit.

• When the freezer compartment is cooled down to sufficient temperature, or the weather gets hot, turn the super switch off to save electrical consumption.

• When you first switch on the appliance, for starting a suitable cooling, the appliance should work 24 hours continuously until it cools down to sufficient temperature.
• In this time do not open the door so often and place a lot of food inside the appliance.
If the unit is switched off or unplugged, you must allow at least 5 minutes before restarting or re-plugged the unit in order not to damage the compressor.

Replacing the light bulb

To replace the bulb in freezer and fridge departments;

1- Unplug your fridge.
2- Remove the cover of the box from the claws using a screwdriver.
3- Replace with a bulb of maximum 15 Watts.
4- Install the cover.
5- Wait for 5 minutes before re-plugging and bring the thermostat to its original position.

VESTEL WHITE GOODS	DOUBLE DOOR – 4561 TROUBLE-SHOOTING CHART	CUSTOMER SUPPORT

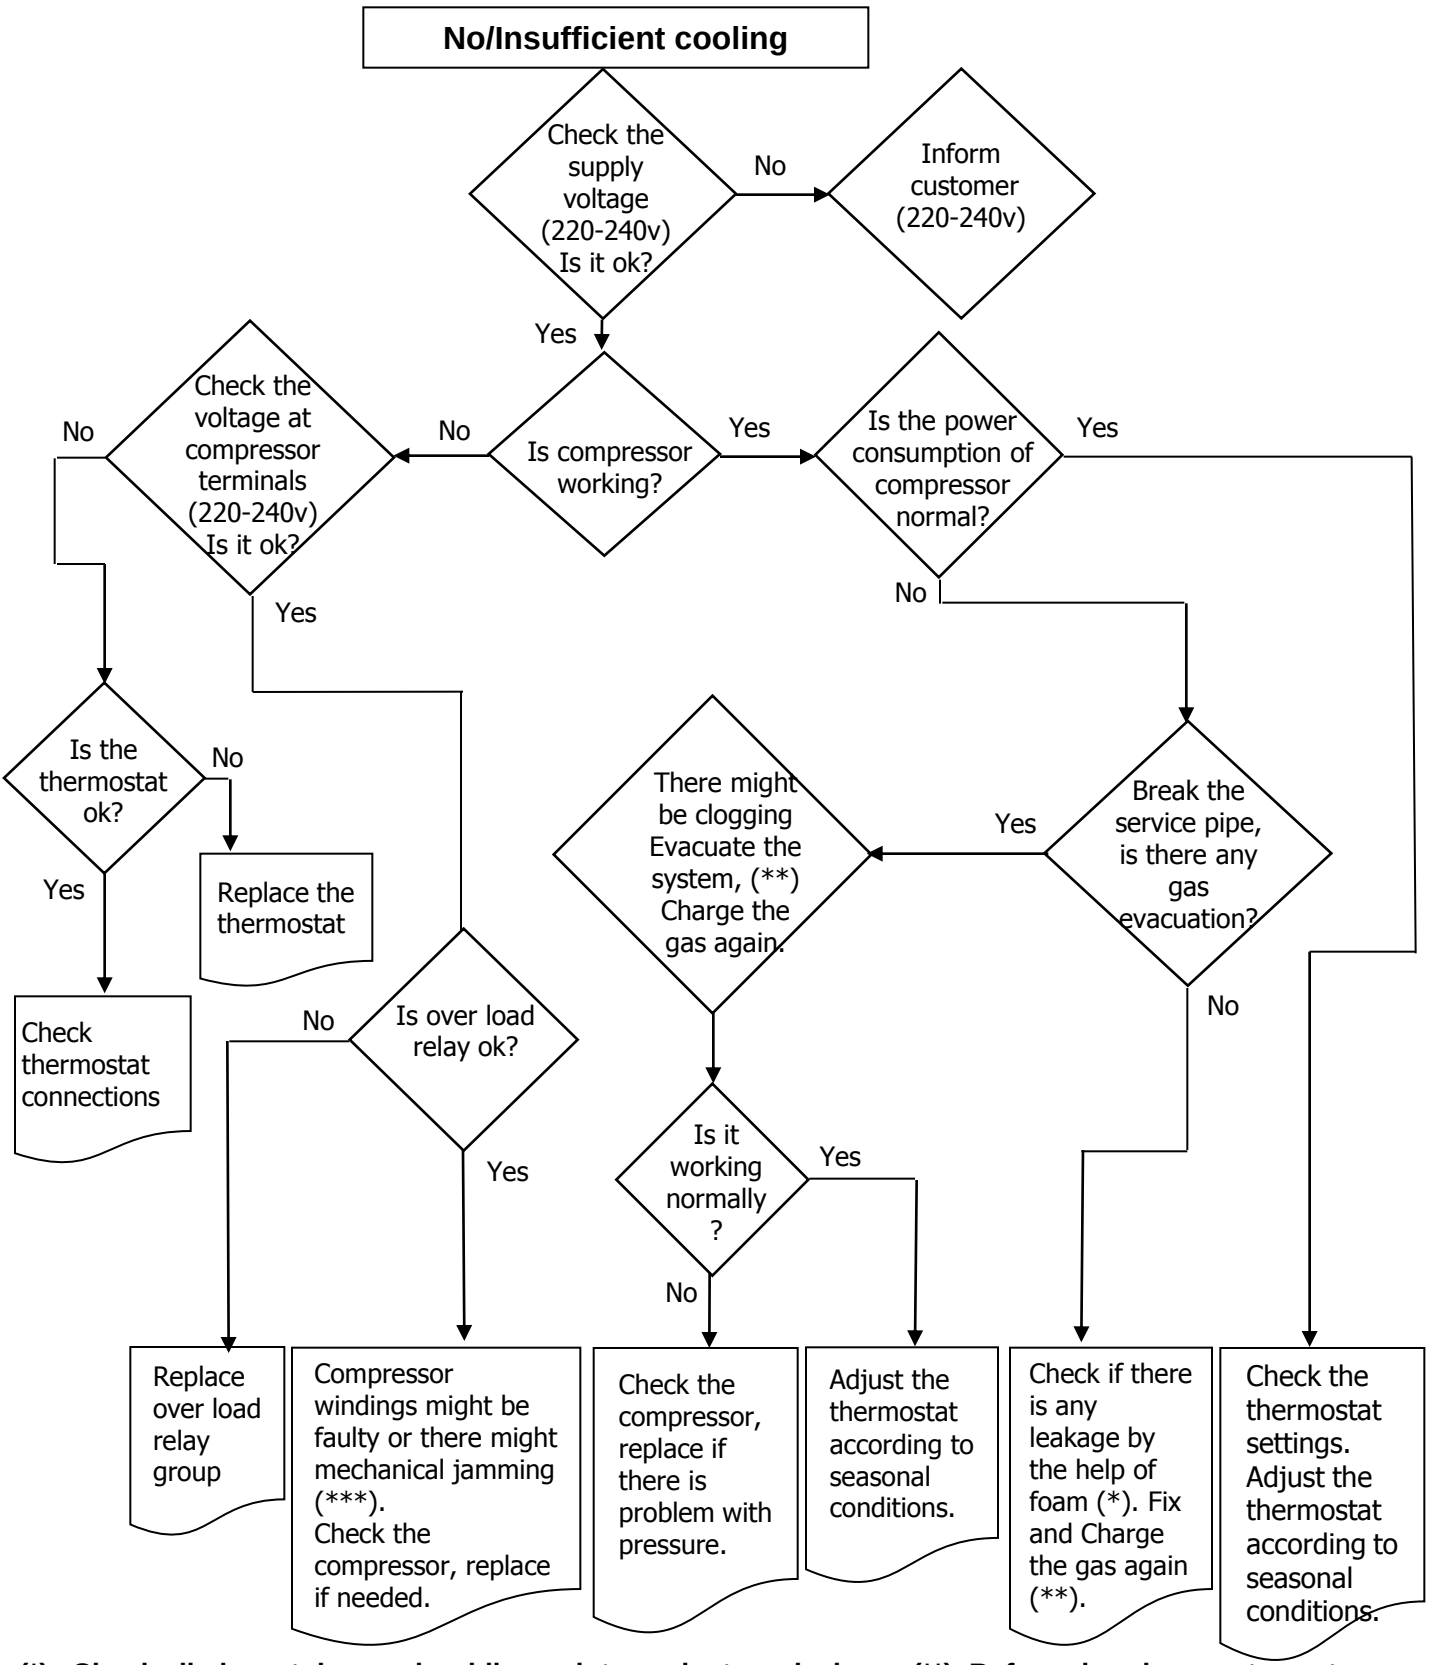
No/Insufficient cooling
Check the supply voltage (220-240v) Is it ok?
No
Inform customer (220-240v)
Yes
Is compressor working?
No
Check the voltage at compressor terminals (220-240v) Is it ok?
No
Yes
Is the power consumption of compressor normal?
Yes
No
Is the thermostat ok?
No
Replace the thermostat
Yes
Check thermostat connections
Yes
Is over load relay ok?
No
Replace over load relay group
Yes
Compressor windings might be faulty or there might mechanical jamming (***).
Check the compressor, replace if needed.
There might be clogging Evacuate the system, (**) Charge the gas again.
Yes
Break the service pipe, is there any gas evacuation?
No
Is it working normally ?
Yes
Adjust the thermostat according to seasonal conditions.
No
Check the compressor, replace if there is problem with pressure.
Check if there is any leakage by the help of foam (*). Fix and Charge the gas again (**).
Check the thermostat settings. Adjust the thermostat according to seasonal conditions.

(*) Check all pipes, tubes and welding points against gas leakage. (**) Before charging gas to system, change dryer and vacuum at least 30 minutes, then charge the system with amount written on label (***) Compressor primary winding should be around 10 Ω and secondary around 15 Ω (at 25^{0}C ambiance temp.)

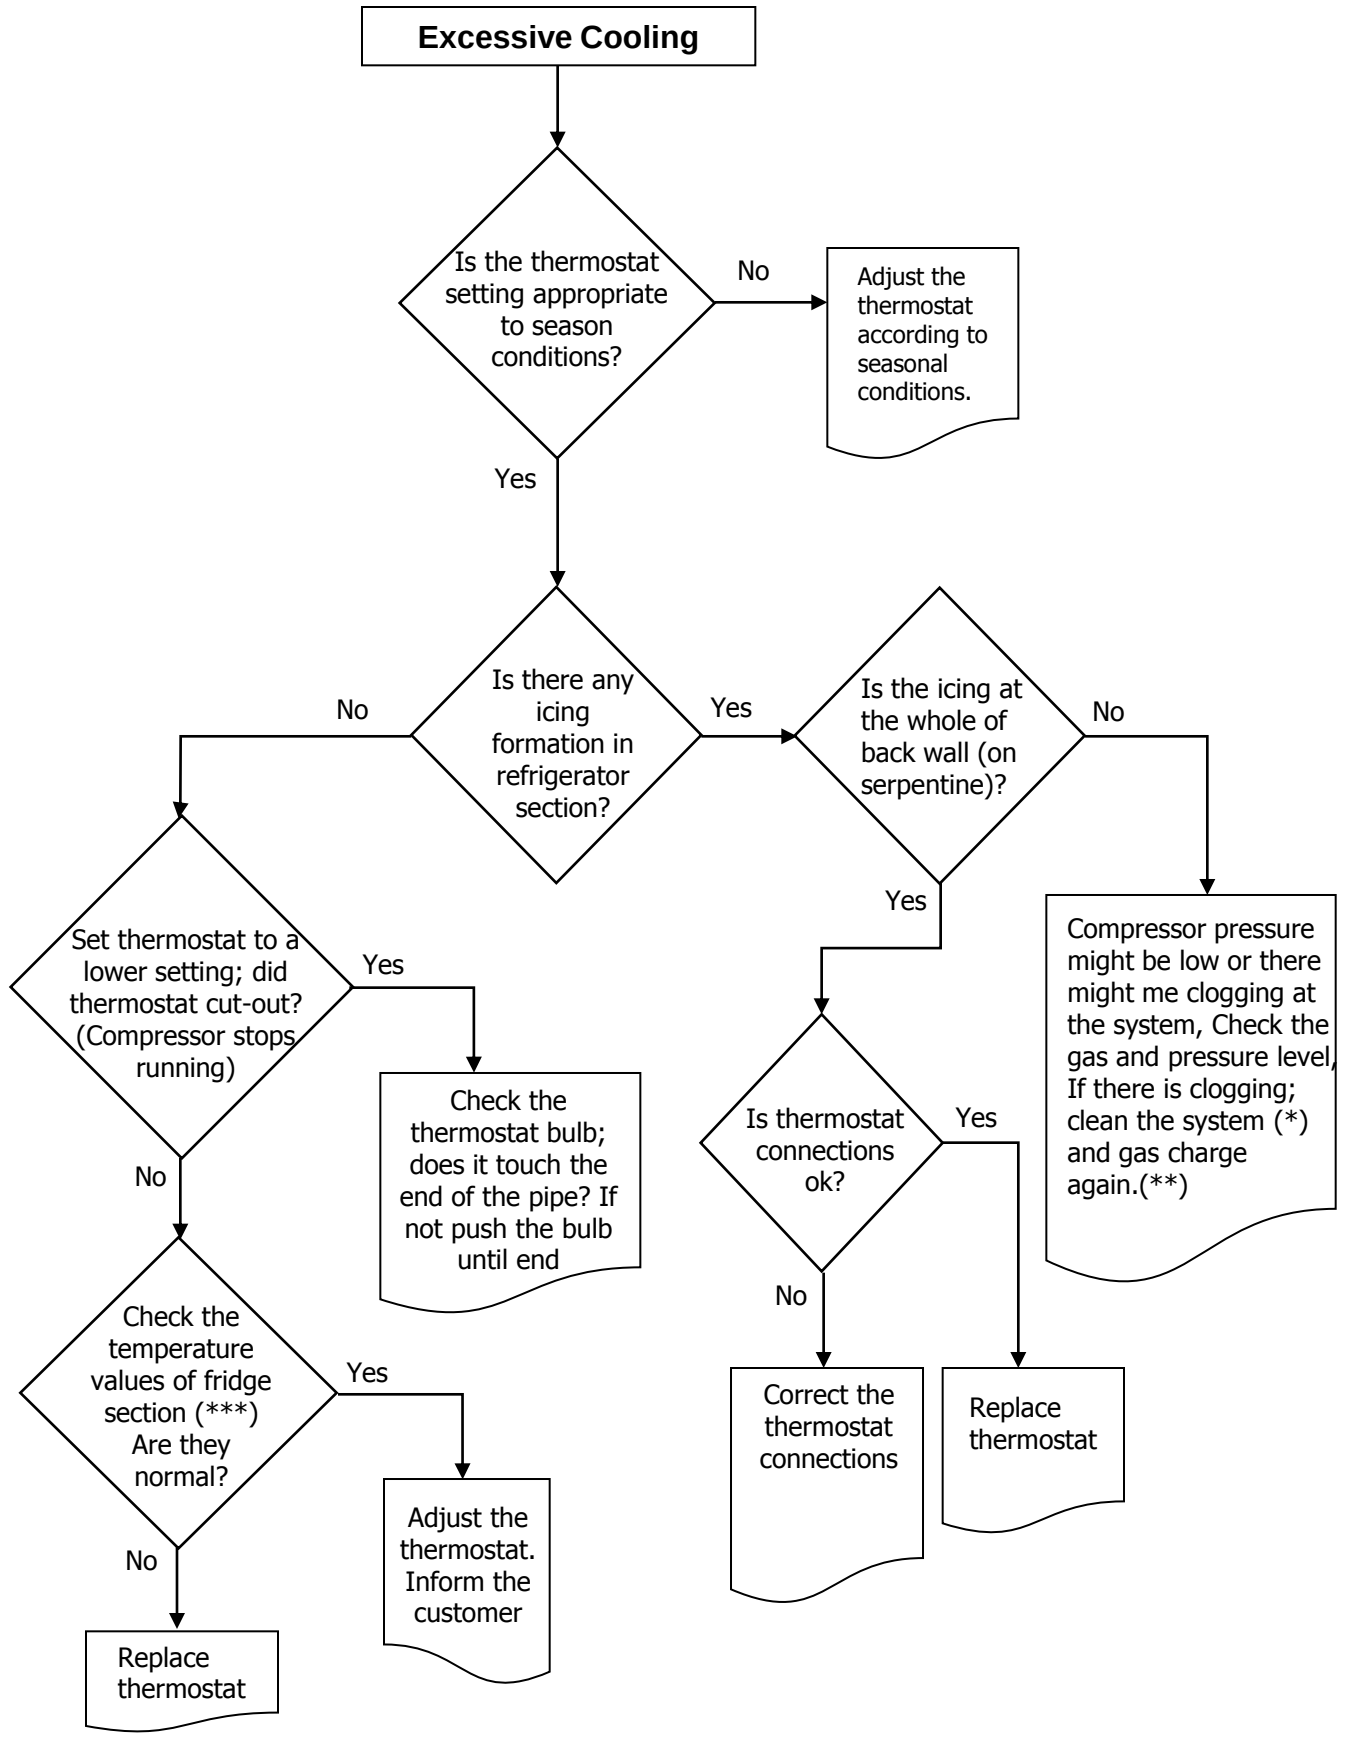
Excessive Cooling
Is the thermostat setting appropriate to season conditions?
No
Adjust the thermostat according to seasonal conditions.
Yes
Is there any icing formation in refrigerator section?
No
Yes
Is the icing at the whole of back wall (on serpentine)?
No
Compressor pressure might be low or there might me clogging at the system, Check the gas and pressure level, If there is clogging; clean the system (*) and gas charge again.(**)
Yes
Set thermostat to a lower setting; did thermostat cut-out? (Compressor stops running)
Yes
Check the thermostat bulb; does it touch the end of the pipe? If not push the bulb until end
No
Check the temperature values of fridge section (***) Are they normal?
Yes
Adjust the thermostat. Inform the customer
No
Replace thermostat
Is thermostat connections ok?
Yes
Replace thermostat
No
Correct the thermostat connections

Door/Gasket Adjustment

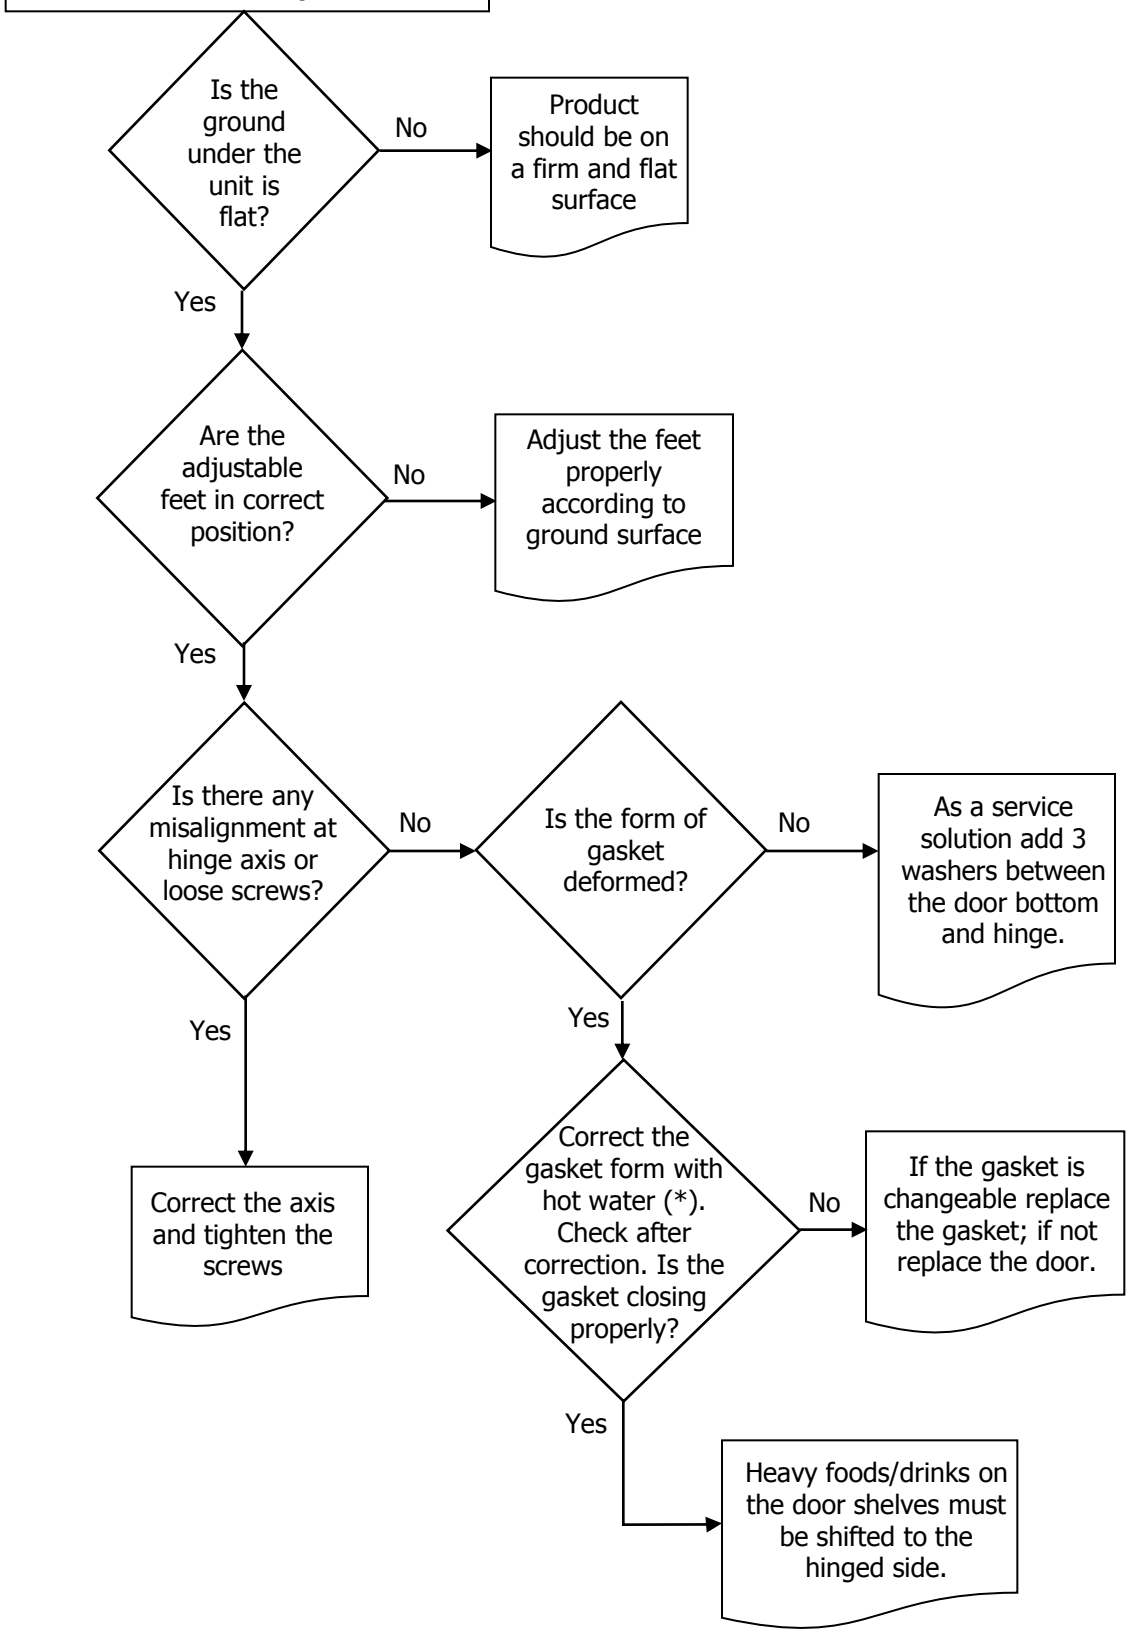
Is the ground under the unit is flat?
No
Product should be on a firm and flat surface
Yes
Are the adjustable feet in correct position?
No
Adjust the feet properly according to ground surface
Yes
Is there any misalignment at hinge axis or loose screws?
No
Is the form of gasket deformed?
No
As a service solution add 3 washers between the door bottom and hinge.
Yes
Correct the axis and tighten the screws
Yes
Correct the gasket form with hot water (*). Check after correction. Is the gasket closing properly?
No
If the gasket is changeable replace the gasket; if not replace the door.
Yes
Heavy foods/drinks on the door shelves must be shifted to the hinged side.

(*) Correct the gasket form by the help of hot water and hair dryer.

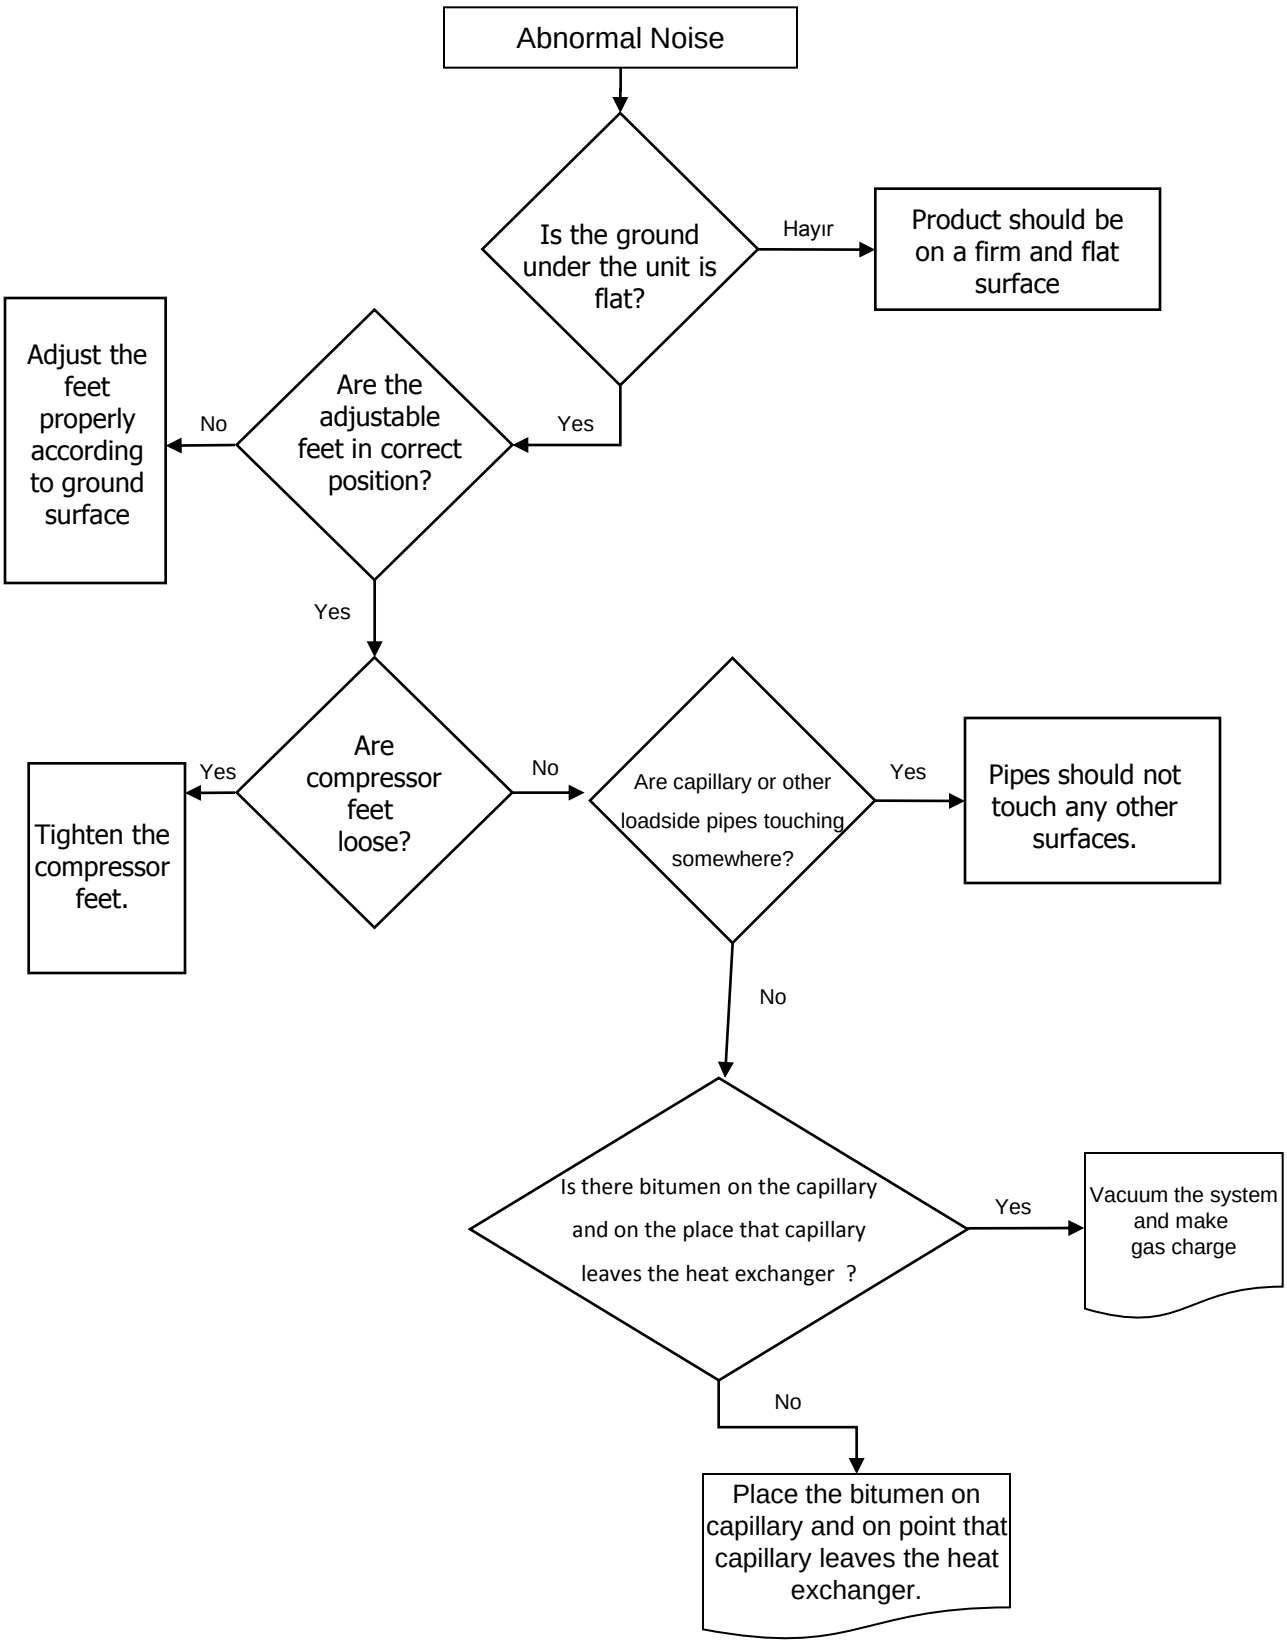
Abnormal Noise
Is the ground under the unit is flat?
Hayır
Product should be on a firm and flat surface
Yes
Are the adjustable feet in correct position?
No
Adjust the feet properly according to ground surface
Yes
Are compressor feet loose?
Yes
Tighten the compressor feet.
No
Are capillary or other loadside pipes touching somewhere?
Yes
Pipes should not touch any other surfaces.
No
Is there bitumen on the capillary and on the place that capillary leaves the heat exchanger ?
Yes
Vacuum the system and make gas charge
No
Place the bitumen on capillary and on point that capillary leaves the heat exchanger.